

NX-8 Cheat Sheet



Press * or Enter Code to Silence Trouble Beeps

Arm AWAY 4 digit code or press EXIT Button (EXIT Light turns ON)

Arm STAY 4 digit code + STAY (EXIT, STAY, BYPASS turns ON)

Quick Arm Press EXIT Button to arm Away, STAY Button if arming in Home Mode

Disarm 4 digit code (If wrong code entered keypad beeps 3 times, try again)

Cancel Button Enter Code + CANCEL Button to stop signal to monitoring station

Bypass 1. Press BYPASS

2. Enter User Code if required (BYPASS Light will Flash)

3. Enter Zone to Bypass (1 to 192)

4. Press BYPASS Button again (Bypassed Zone turns ON)

5. Enter next Zone to Bypass or # to exit

Group Bypass (If enabled) BYPASS + 0 + BYPASS (Bypasses several motions)

Alarm Memory Press * + 3, last Alarm will flash, press # to exit

Event History 1. Press * 90 (Keypad prompts for Master Code)

(LCD Keypads) 2. Enter Master Code (Keypad shows last event)

3. Press UP and DOWN Arrows to scroll (Down scrolls back through history)

4. Press # to exit

Smoke Reset Press * 7

(If Smoke still sounds power down system, Smoke detector is bad)

Door Chimes Press CHIME Button to enable/disable (CHIME light turns ON)

System Test Press * 4 to test Battery, Communicator and/or Siren


Keypad Volume 1. Press * + 0, keypad begins beeping

2. Press UP Arrow key to raise Tone, Down Arrow to lower Tones

(If keypad has no Arrow keys press 1 to raise Tone, 2 to lower Tone)

3. Press # to exit

Service Light

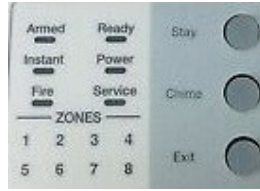

Press * or Enter Code to Silence Trouble Beeps

If Service Light or "Service Required" is on press * 2

Light 1 - System Fault (press 1 again)

- 1 = Low Battery
- 2 = Siren Trouble
- 3 = Panel Box Tamper
- 4 = Zone Expander Power Fault
- 5 = Zone Expander Low Battery
- 6 = Zone Expander Tamper
- 7 = Zone Expander Internal Trouble
- 8 = Ground Fault

Light 2 - Zone Tamper, press 2 to show zone

Light 3 - Zone Low Battery, press 3 to show zone

Light 4 - Zone Loss of Supervision, press 4 to show zone

Light 5 - Zone Trouble, press 5 to show zone

Light 6 - Telephone Line Trouble

Light 7 - Failure to Communicate

Light 8 - Loss of Internal System Time

Press # to exit

CODES

Master Code User 001 (may be 01 on older systems)

Secondary Codes User 002 to 240 (may be 02 to 24 on older systems)

Add Code 1. Press * 5 + Master Code (Ready light will flash)

2. Enter User (001 to 240) (may be 01 to 24 on older systems) (Zone lights will/may turn on)

3. Enter new User Code

4. Press # to exit

Monitoring Station

24/7

1-866-539-8807

Service Department

M-F 8-5

512-302-1181